



# Slide Stainer Service Manual

AMOS SCIENTIFIC PTY.LTD. ABN:37 159 778 140

www.amos-scientific.com

# Contents

| 1. General Provisions          | 1 |
|--------------------------------|---|
| 2. Configuration               | 1 |
| 3. Distribution of Liquid Tank | 1 |
| 4. Exploded View               | 2 |
| 5. Trouble Shooting            | 3 |
| 6. Schematic Diagram           | 8 |
| 7. Wiring Diagram              | 9 |

# ASS190 Slide Stainer Service Manual

### 1: General Provisions

The Service Manual of the instrument is compiled according to its structure and characteristic.

# 2: Configuration

The instrument provides the design of AC110V/220V, composes of tank, temperature controlling and engine movement.

- 1、Tank
- 1): 2 pieces of water tank.
- 2): 17 pieces of reagent tank.
- 2、Engine movement
- 1): The motor controls the up and down movement step-by-steps.
- 2): The motor controls the left and right movement step-by-steps

### **3:** Distribution of Liquid Tank

| 1     | 2     | 3               | 4           | 5     | 6 | 7 | 8    | 9   | 10  | 11          | 12          | 13  | 14  | 15 | 16   | 17       | 18    | 19 |
|-------|-------|-----------------|-------------|-------|---|---|------|-----|-----|-------------|-------------|-----|-----|----|------|----------|-------|----|
| Water | Water | Hcl-<br>alcohol | Hematoxylin | Eosin |   |   | 100% | 95% | 85% | alco<br>70% | ohol<br>75% | 85% | 95% |    | Dime | thyl ber | nzene |    |
|       |       |                 |             |       |   |   |      |     |     |             |             |     |     |    | %    |          |       |    |

**Note:** The Beginning tank is from Tank 6 & Tank 7 (the basket is staying in tank 6 to waiting to run the program 1 and other basket in tank 7 wait to run program 2). Press key  $\overline{\text{RUN}}$ , the system will test the basket in the beginning tank automatically or not, if the two baskets all stay well in the Tank 6 and 7, the instrument will run the program 2 firstly, and then run the program 1. The system provides eight programs be edited. (Note: when programming, make sure the basket in tank 6 running don't overtake the basket in tank 7 to avoid getting stuck, if meet the stuck, the long buzzer rings will remind user. So, PLEASE NOTE:1. Staying time of basket in the tank 6 is more than tank 7, the others time


programmed should be same.

- 2. The finished tank should be not same.
- 3. Water in tank 1 for program 1, Water in tank 2 for program 2.


### 4: Exploded View

- 1) Basket Accessory
- 2) Sealing cover
- 3) Water tank
- 4) Display and push button
- 5) Organic glass cover

- 6) Back cover plate
- 7) Activated carbon
- 8) Switch and power socket
- 9) Filter
- 10) Power switch
- 11) Control board & Driver
- 12) Housing

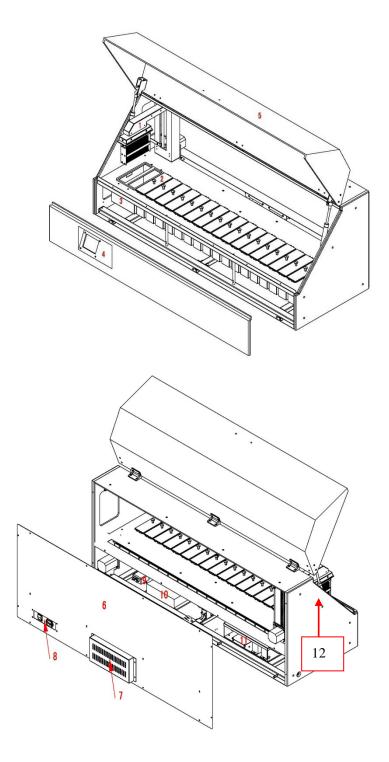

----2----

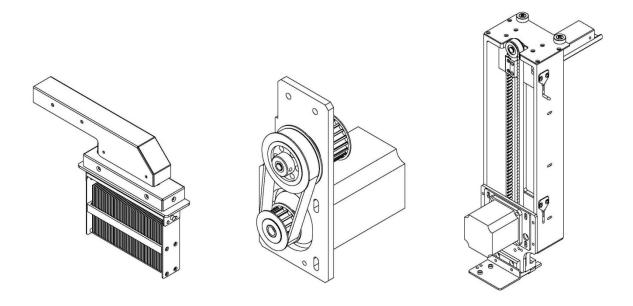

Hanging basket assembly

Movement assembly

# 5: Troubleshooting

#### **<u>1. No any answer when machine starts.</u>**

- 1): Tests the power cord connecting well and fuse well.
- 2): 5A fuse blows out, please replace it:


#### **Replace the fuses :**

put the fuse (1) in the installation part (2) and then insert the installation part into the socket(3).

• Cut off the power supply and pull out the plug before change the fuse.



- 3): 24V switch power supply has no output signal, please replace it.
- 4): Flat Cable(F/C) plug is loose( Refer to below Pic.). Tests each F/C plug whether to fixed or not: Please pulls out each plug and re-insert them, then pulls each wire on F/C plug gently by hand. If looseness, please fix them again with screwdriver.

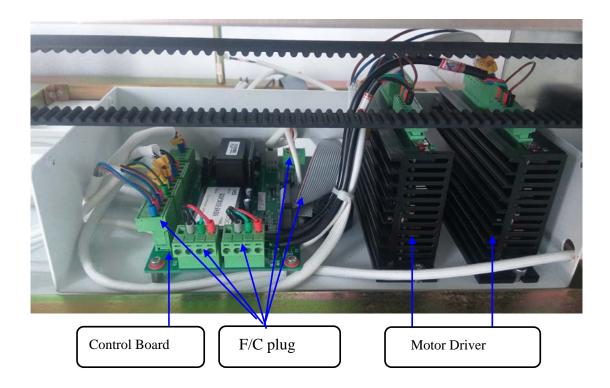

5): UPS has no output signal.


Inspection Method: Test if any voltage from output with multimeter.

#### 2. The hanging basket is out of order on up and down or left and right movement

1): Stepper Motor driver is damaged or the related wire is disconnection (As shown on Pic.)


Solution :

Test if the wire connecting between motor and driver, main board and driver is disconnection, clear this kind of trouble and then check if anything wrong with the driver.

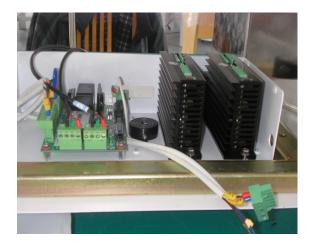


2): Motor is damaged(As shown on Pic.)

Solution: Check if the motor is short circuit with multimeter . If yes , please replace a new one .

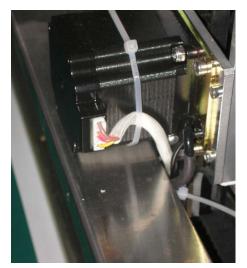


#### 3. The basket can't stop move up or down , and makes intense vibration sound .

The up limit switch or down limit switch fixed on transmission block body is broken, don't make limited effect. Please replace a new one.

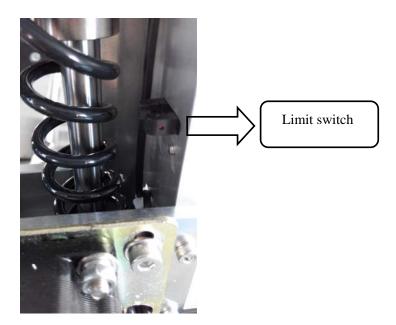

#### 4. The basket doesn't run as program setting


The display board may be broken, please replace the display board as below picture. The program is stored in display board.

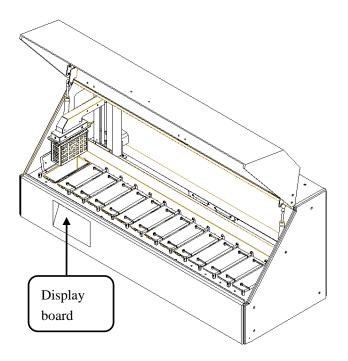

#### 5. The water tank don't fill in with water .

It may caused by :

- a. Water supply interrupts . Solution: check the water supply
- b. It is failure with the wiring of supply electrovalve. Solution : Check the wiring with multimeter and clear the trouble .
- c. The supply electrovalve is damaged Solution: replace a new one .

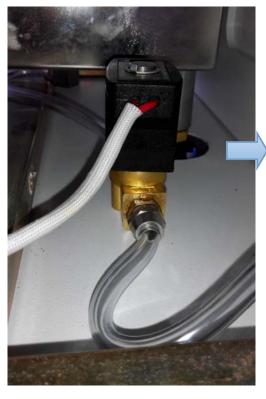


Supply electrovalve

#### 6. Water level in the water tank is too low which can not wash the slides clearly .

When the speed of input water is faster than drainage, the water in the tank can be accumulation :


a : Water pressure is too small . Solution : increase water pressure

b: The drainage hole is too large . Solution : reduce the size of drainage hole .

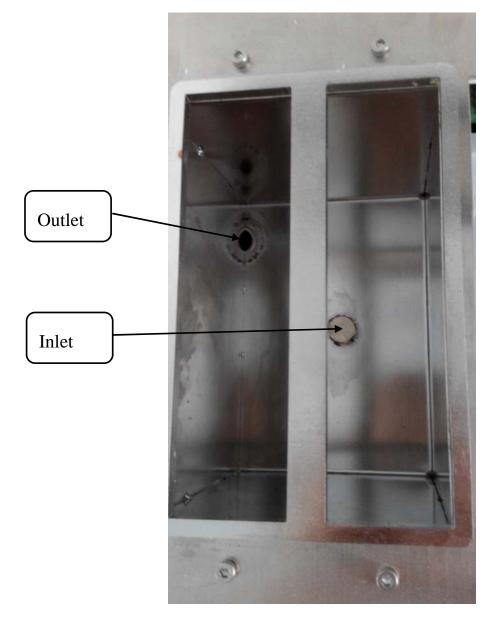

# Schematic Diagram


6:

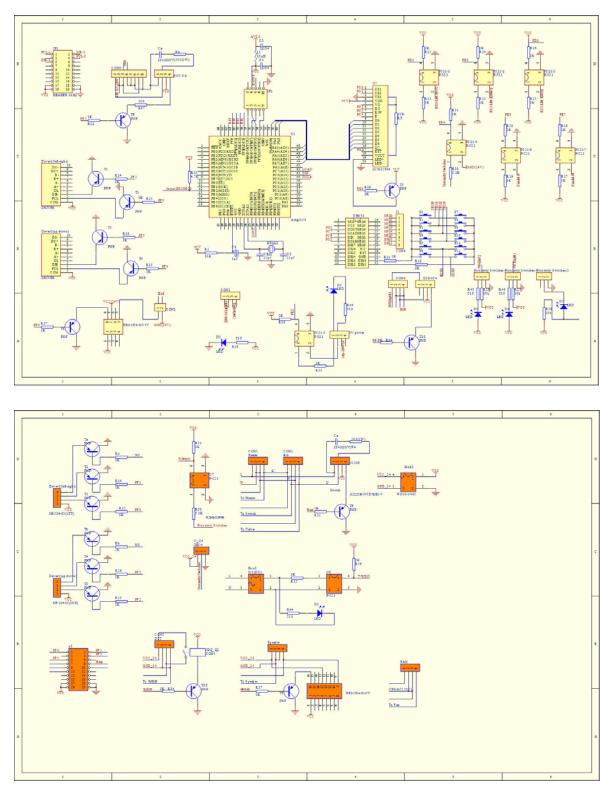

Schematic diagram

#### Wiring Diagram

7:

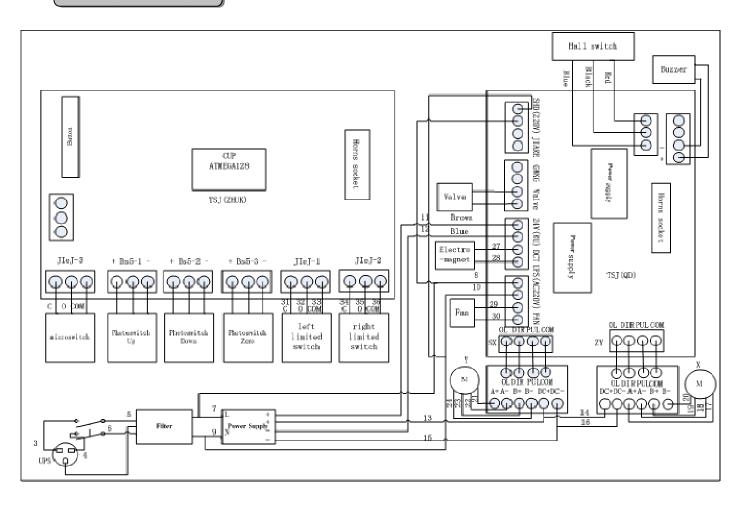

Wiring diagram

---9----



# **AMOS SCIENTIFIC PTY.LTD.**

37/632 CLAYTON ROAD , CLAYTON SOUTH VIC 3169 , AUSTRALIA Tel: +61-3-95518850 Fax: +61-3-95516885 ABN 37 159 778 140 www.amos-scientific.com