

# **TEC 2500**

# Water bath-Slide drier

# **Operation Manual**

AMOS SCIENTIFIC PTY.LTD. ABN37 159 778 140

www.amos-scientific.com

## **Fore Word**

Thank you for purchasing our TEC 2500 Water Bath-Slide Drier. Presented in this 《Operation Manual》 are the functions and operation methods of the TEC2500 Water Bath-Slide Dryer and the matters needing attention concerning safety. Please carefully read this manual before use so that you can understand its performance better and make full use of the functions. If you have any questions, contact us and we will provide best service for you at any time.

Please keep this 《Operation Manual》 appropriately for later consultation

# **Contents**

1. Safety Instructio	on	1		
1.1 Safety Matte	ers	1		
	f installation			
	pection			
2. Performance Features & Range of Application				
3. Main structure		2		
4. Technical Parame	eters	3		
5. Operation		3		
5.1Keypad Des	scription & Function	3		
5.2 Instruction		4		
6. Layout Of Components & Electric Wiring Diagram				
7. Trouble Shooting		6		
8. Layout Of Compo	onents In Pcb Circuit Board	7		
9.Schematic Diagra	am of Electric Equipment	7		
10.Wiring Diag	gram	8		



## Safety Instruction

#### 1.1 Safety Matters

• Please read these concise rules. Any violation against them will affect normal use of equipment or cause damage to equipment or danger.



Please use 220VAC  $\pm$  10% at 50HZ or 110v $\pm$ 10%, 60Hz AC.



Input power supply must be of good earth connection.



Keep away from flammables and explosives.



Don't open equipment without authorization to avoid high voltage shock.



Only professional maintenance personnel is allowed to repair equipment.



Use fuses with correct capacity



Ensure power socket and circuit be able to bear 2 times of rated current at least.



Keep away from from any interference source.



Caution: Hot.

**■** Electrical Protection Ratings: I class, B type

■ Shell protection grade: IP53

- Harmful liquid Leak-in proof degree: Normal (enclosed equipment without liquid leak-in proof)
- **■** Working system: Continuous operation

#### 1.2 Conditions of installation

- Ensure more than 20cm of space around the equipment for heat dissipation.
- No water drop, steam, dust including oily dust and floating dust.
- No erosive, flammable and explosive gas and liquid.
- Solid and non-vibration.
- No interference from other electromagnetic signals.
- lacktriangle Operating ambient temperature from 5°C to 40°C, relative humidity under 90%

#### 1.3 Delivery Inspection

Although the product has already been inspected before leaving the factory, the following inspection is necessary at delivery because the product may be damaged and accessories get missing caused by careless handling during transportation.



sure that the product, operation manual,

ne you ordered.

aged or missing during transportation.

#### ation

drying apparatus has the characteristics of e, digitalization temperature control and peration easier and more reliable.

ying apparatus can be widely used in such ies.



#### 4. Technical Parameters

temperature range

Bath tank: room temperature  $\sim$  90°C, the most favorable temperature is in 45°C

Oven: room temperature  $\sim$  90°C, the most favorable temperature is in 70°C

Warmer: room temperature  $\sim$  90°C, the most favorable temperature is in 70°C

• input voltage:220v±10% at 50Hz or 110v±10% at 60Hz

• Fuse:220V/5A or 110V/8A


• rated power::600W

• outside dimensions(mm): $550 \times 340 \times 140$ 

• weight: 9Kg

#### 5. Operation

drier mode.

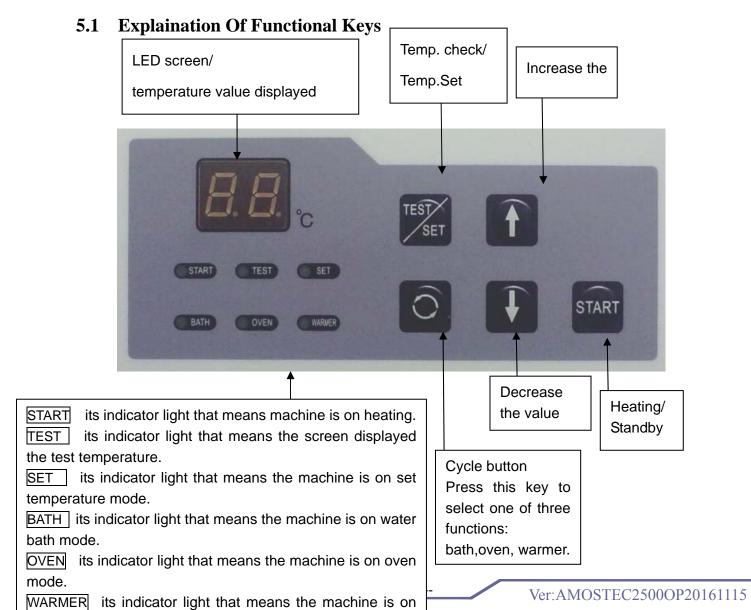

<ul><li>Key and function</li></ul>
Start heating switch;
Test/Set for temperature measurement or temperature setting;
for function change-over. Press this key to select one of the three
functions of oven, bath and warmer;
Press this key to increase the temperature;
Press this key to decrease the temperature
<ul><li>Indicator lamp and function</li></ul>
°C This lamp indicates the temperature;
Start When this lamp lights ,it means that the apparatus is in heating state;
Test When this lamp lights, the value shown by C is the measured temperature;
set When this lamp lights, the value shown by C is the set temperature.
At the moment, it is also possible to set the temperature again;
Bath When this lamp lights, it means that the apparatus is in bath state;
Oven When this lamp lights, it means that the apparatus is in oven state;
Warmer When this lamp lights, It means that the apparatus is in warm state;
5.2 Instruction
1. Take out the bath tank and fill it with proper amount of water (The water level in the tank
should be between one third and two thirds of the depth of the tank). Then put the tank back. Please
don't fiddle with the digital sensor under the tank to avoid affecting temperature control.
2. Connect the equipment to power supply and turn on the switch at the rear of the equipment.
3. Press the key until the indicator lamp Bath lights. Then press Test/set until the lamp set
light. Now press to set ①、 Uthe required temperature in the bath tank.
4. Press the key till the lamp Oven lights. Then press Test/set until the lamp set light. Now
press to set 1. Uthe required temperature in the oven.

- 5. Repeat the above process to set the temperature in the warmer.
- 6. After setting the temperature in the bath tank, oven and warmer, press Start till the lamp start lights. At the moment, heating begins. When the set temperature is reached, press Start again to heating stops and the set temperature is kept constant.

Note: Normally, heating should begin half an hour before operation.

#### **♦** How to check the temperature to see if it reaches the set value

After the equipment is heated for a period of time, press the key Test/set to check the temperature in the bath tank, oven or warmer as follows:

To check whether the temperature in the bath tank, for example, reaches the set value, press the key till the lamp Bath lights, and then press the key Test/set till the indicator Test lights. The value shown by C is the current temperature in the bath tank. The current temperature in the oven and warmer is also checked in the same way.

After using of the equipment, press the key start till the indicator start goes out and then turn off the power switch at the rear of the equipment.

### 6. Cleaning & Maintenance

- The input power supply must have good earth connection
- The bottom of water bath box must keep dry for fear of creep aging or bobbling heating up piece. Keep the equipment clean for fear of influencing the control of temperature.
  - Take care that the outside heating up piece hurt you.
- Install fuse as figure(1) shown then put it into the installation part as figure(2)shown. At last put the whole installation into the receptacula as figure(3)shown.
  - Before replacing the fuse must turn off the power switch and disconnect the power.

Specification of fuse: 5A (220V) ,8A(110V).




## 7. Trouble Shooting


Symptom		Cause	Judgment	Remedy
		Poor connection of power supply	Connection again	Correct it
Display operation		Switch at the rear of the equipment not on	Turn on	Turn it on
not work		Fuse blow	Take out the fuse to check its internal resistance by multimeter, if the value is infinite, the fuse is broken	Replace a new one
Temperature in the		dirty substance at the bottom	Clean the bottom	Clean the bottom
bath tank is not				and put the right
accurate				position
	LCD	Sensor in bath tank is damaged		Replace a new sensor  Replace a new relay
	Shows E1	School in bath talk is damaged	Comment a many comments might	
	LCD	Sensor in oven is damaged	okay, it means the sensor is broken is damaged erheated (relay	
	Shows E2	Sensor in oven is damaged		
	LCD	Sensor in warmer is damaged		
Buzzer	Shows E3	Sensor in warmer is damaged		
sounds	LCD	` '		
	Shows E4	in bath tank is damaged)		
	LCD	Oven is overheated (relay in	Chook the relev	
	Shows E5	drying oven is damaged)	Check the relay	
LCD		Warmer is overheated (relay in baking trough is damaged)		
	Shows E6	baking trough is damaged)		
No heating		Heating film damaged	Check the heating film maybe	Replace a new
			broken because the overheated	heating film
			Take out the fuse to check its internal	Replace a new
		Fuse blow	resistance by multimeter, if the value	fuse
			is infinite, the fuse is broken	1450

If other troubles occur or the above troubles can not be eliminated, please contact us.


### 8. Layout Of Components In Pcb Circuit Board

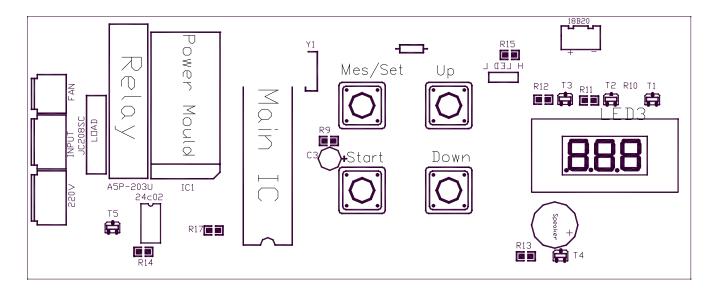

## 9. Schematic Diagram of Electric Equipment

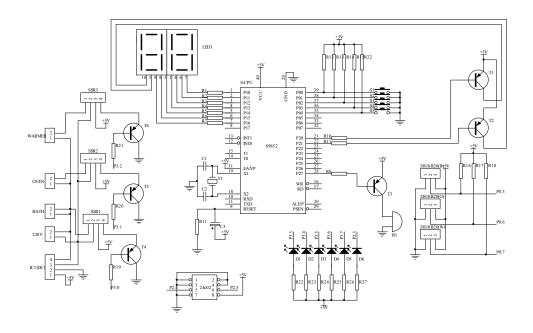

## 10. Wiring Diagram

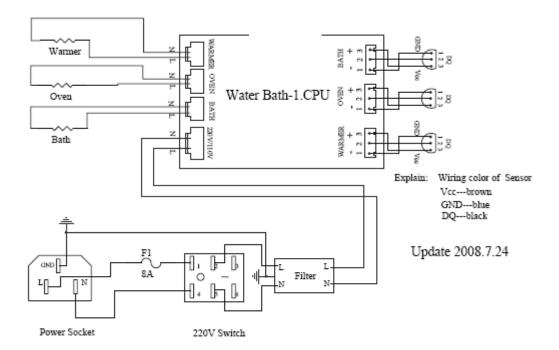

# **Standard Accessories List**

No	Accessory Name	Qty	Notes
1	Water bath-slide drier	1 unit	
2	Power Cord	1pc	
3	Fuse	2pcs	
4	Operation Manual	1pc	

## Published by:





# **AMOS SCIENTIFIC PTY.LTD**

7 Gabrielle Court, Bayswater North VIC 3153 Melbourne, Australia Tel: +61-410190188 Fax: +61-410190188

ABN 37 159 778 140

www.amos-scientific.com